

2008, 2009, 2010, 2011 Dyna Models Service Intervals

ITEM SERVICED	PROCEDURE	1000 M	5000 M	10,000 M	15,000 M	20,000 M	25,000 M	30,000 M	NOTES	COMPLETE
Engine oil and filter	Replace	X	X	X	X	X	X	X		
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	X	1, 3	
Air cleaner	Inspect, service as required	X	X	X	X	X	X	X		
Tires	Check pressure, inspect tread	X	X	X	X	X	X	X		
Wheel spokes	Check tightness	X	X	X	X	X	X	X	1, 5	
Primary chaincase lubricant	Replace	X	X	X	X	X	X	X		
Transmission lubricant	Replace	X	X	X	X	X	X	X		
Clutch	Check clutch adjustmnet	X	X	X	X	X	X	X	1	
Drive belt and compensator sprocket	Inspect, adjust belt	X	X	X	X	X	X	X	1	
Throttle, brake, and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	X	1	
Jiffy stand	Inspect and lubricate	X	X	X	X	X	X	X	1	
Fuel lines and fittings	Inspect for leaks	X	X	X	X	X	X	X	1, 3	
Fuel pump filter	Replace						X		1	
Brake fluid	Check levels and condition	X	X	X	X	X	X	X	4	
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	X		
Spark plugs	Replace	X	X	X	X	X	X	X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	X		
Front fork oil	Replace								1, 6	
Steering head bearings	Lubricate	X		X		X		X	1, 2	
Rear fork bearings	Inspect							X	1	
Critical Fasteners	Check tightness	X	X	X	X	X	X	X	1	
Engine mounts and stabilizers	Inspect, check tightness			X		X		X	1	
Battery	Check and clean connections	X	X	X	X	X	X	X	3	
Exhaust system	Inspect for leaks, cracks, and loose/missing fasteners and heat shields	X	X	X	X	X	X	X	3	
Road test	Verify component and system functions	X	X	X	X	X	X	X		
NOTES:	<ol style="list-style-type: none"> 1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 30,000 miles (48,000 kilometers). 3. Perform annually or at specified intervals whichever comes first. 4. Change D.O.T 4 and flush brake system every two years. 5. Perform spoke tension check at the 1000, 5000, 20,000 mile services and every 15,000 mile interval thereafter. Not all vehicles are equipped with spoke wheels. Consult appropriate topic in owner's manual 6. Replace fork oil and inspect every 50,000 miles (80,000 kilometers). 									